

Wiring

The magnetic sensor unit or compass-top-sensor which comes with your **AP4** autopilot is fitted with a plug which fits into the socket labelled "compass" on the rear of the autopilot. If the cable must be extended, we recommend that a good quality 5-core shielded extension cable be used. This is available from your supplier or TMQ Electronics.

Calibration

The compass unit will need to be rotated in its holder after installation for the correct heading to be displayed. After initial testing, further adjustment may be required to reduce any heading error displayed. If the **AP4** compass does not adequately match your ships compass then you may need to recalibrate the **AP4** compass. See the Compass Calibration section of this manual.

Interchanging Magnetic Sensor Unit and Compass Top Sensor

The magnetic sensor unit (fluxgate compass) can be interchanged with a compass top sensor. This is desirable when the autopilot is to be fitted to a steel hulled vessel or vessel containing large amounts of steel.

If the magnetic sensor unit and compass top sensor are interchanged, the compass detector DIP switches must be altered. The DIP switch is identified as component 4DIP on the component overlay diagram at the rear of this manual.

Switch 1 and 4 ON - 2 and 3 OFF for magnetic sensor unit (fluxgate)

Switch 2 and 3 ON - 1 and 4 OFF for compass top sensor.