

shows [903] before pressing **TIMER**. Display will show [rES] before returning to normal heading.

=====

## AP4 Special Modes

<u>Display Selection</u>	<u>Button Operation</u>
901 Start compass calibration [CAL]:	TIMER
902 Store compass calibration:	TIMER
903 Return to default calibration [rES]:	TIMER
904 Factory test for calibration	-----
905 Set limit switches:	TIMER/GPS (Port)
TIMER/GPS (Stbd)	
--- Set limit to maximum:	TIMER/GPS/GPS
906 Set commercial watch alarm:	TIMER[A-1]TIMER[***]TIMER
[A-0] = No watch alarm set	
[A-1] = Watch alarm set	
[***] = Time in minutes	
907 Set input from other sin/cos source:	TIMER[A01]GPS
[A00] = normal TMQ compass input	
[A01] = other sin/cos input	
To return to TMQ compass input:	TIMER[A00]GPS
908 Option remote:	
[r-1] = Basic remote	
[r-2] = Active remote	
[r-3] = Basic remote plus power steer on pin 5	
[r-4] = Basic remote plus power steer on pin 5 in set position	
909 Average compass mode:	
[A-0] = no averaging	
[A-1] = averaging enabled	