


Rudder Feedback Installation Diagram

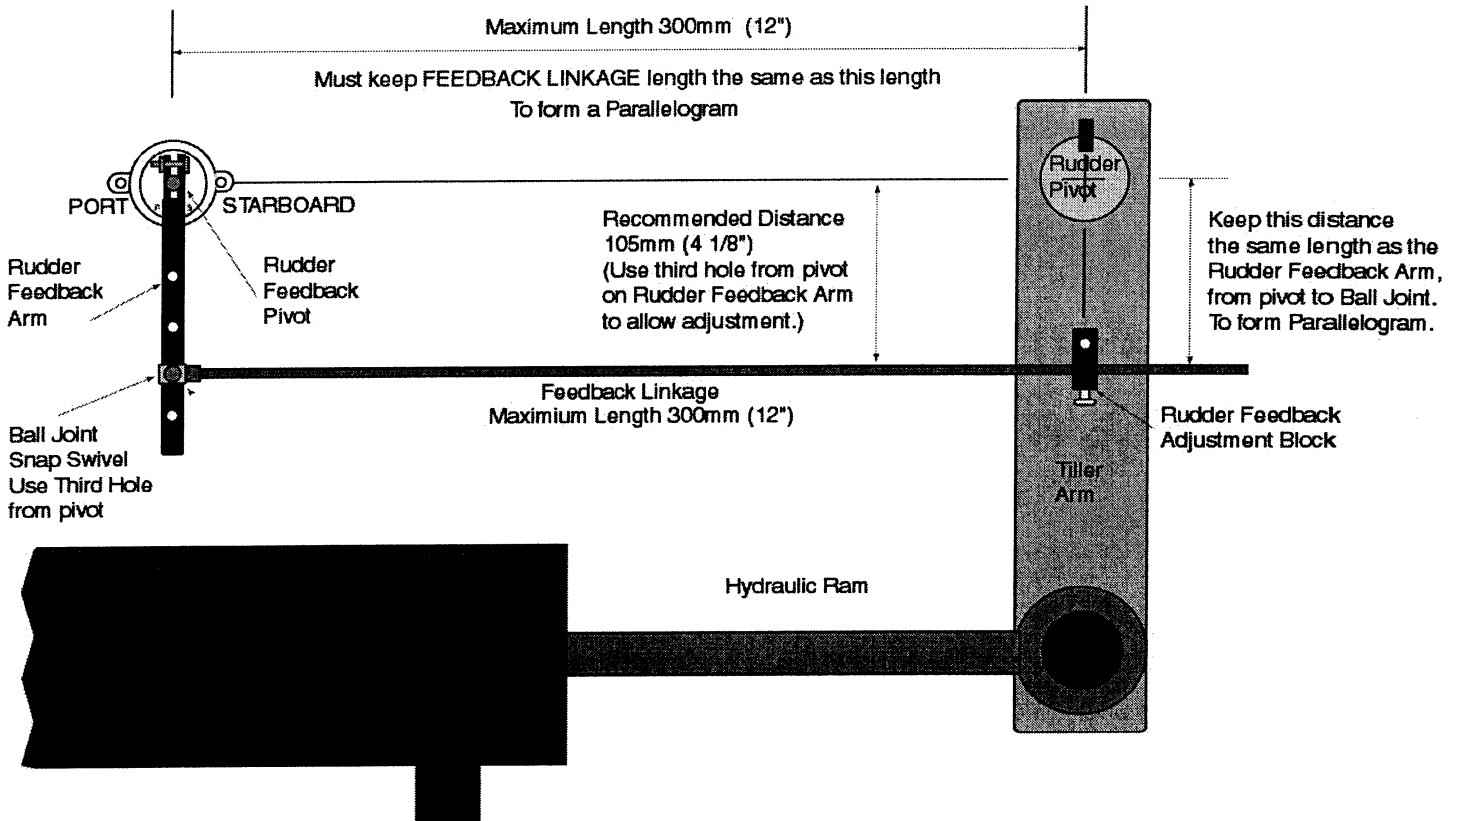

Rudder Feedback Installation Notes

- When the rudder is central and the rudder feedback is central all angles should be 90 degrees.
- Use the snap swivel and ball joint on the rudder feedback arm
- Use the rudder feedback adjustment block on the tiller arm
- Hydraulic ram may be mounted on the other side of the tiller arm
- Ensure that when rudder turns to Port, Rudder Feedback turns to Port as indicated on the rudder feedback unit.
- Rudder feedback unit may be mounted upside down. This would require an electrical change. (Polarity of rudder feedback requires reversing)